


WWW.RVDIJK.NL - B737NG INTERFACE

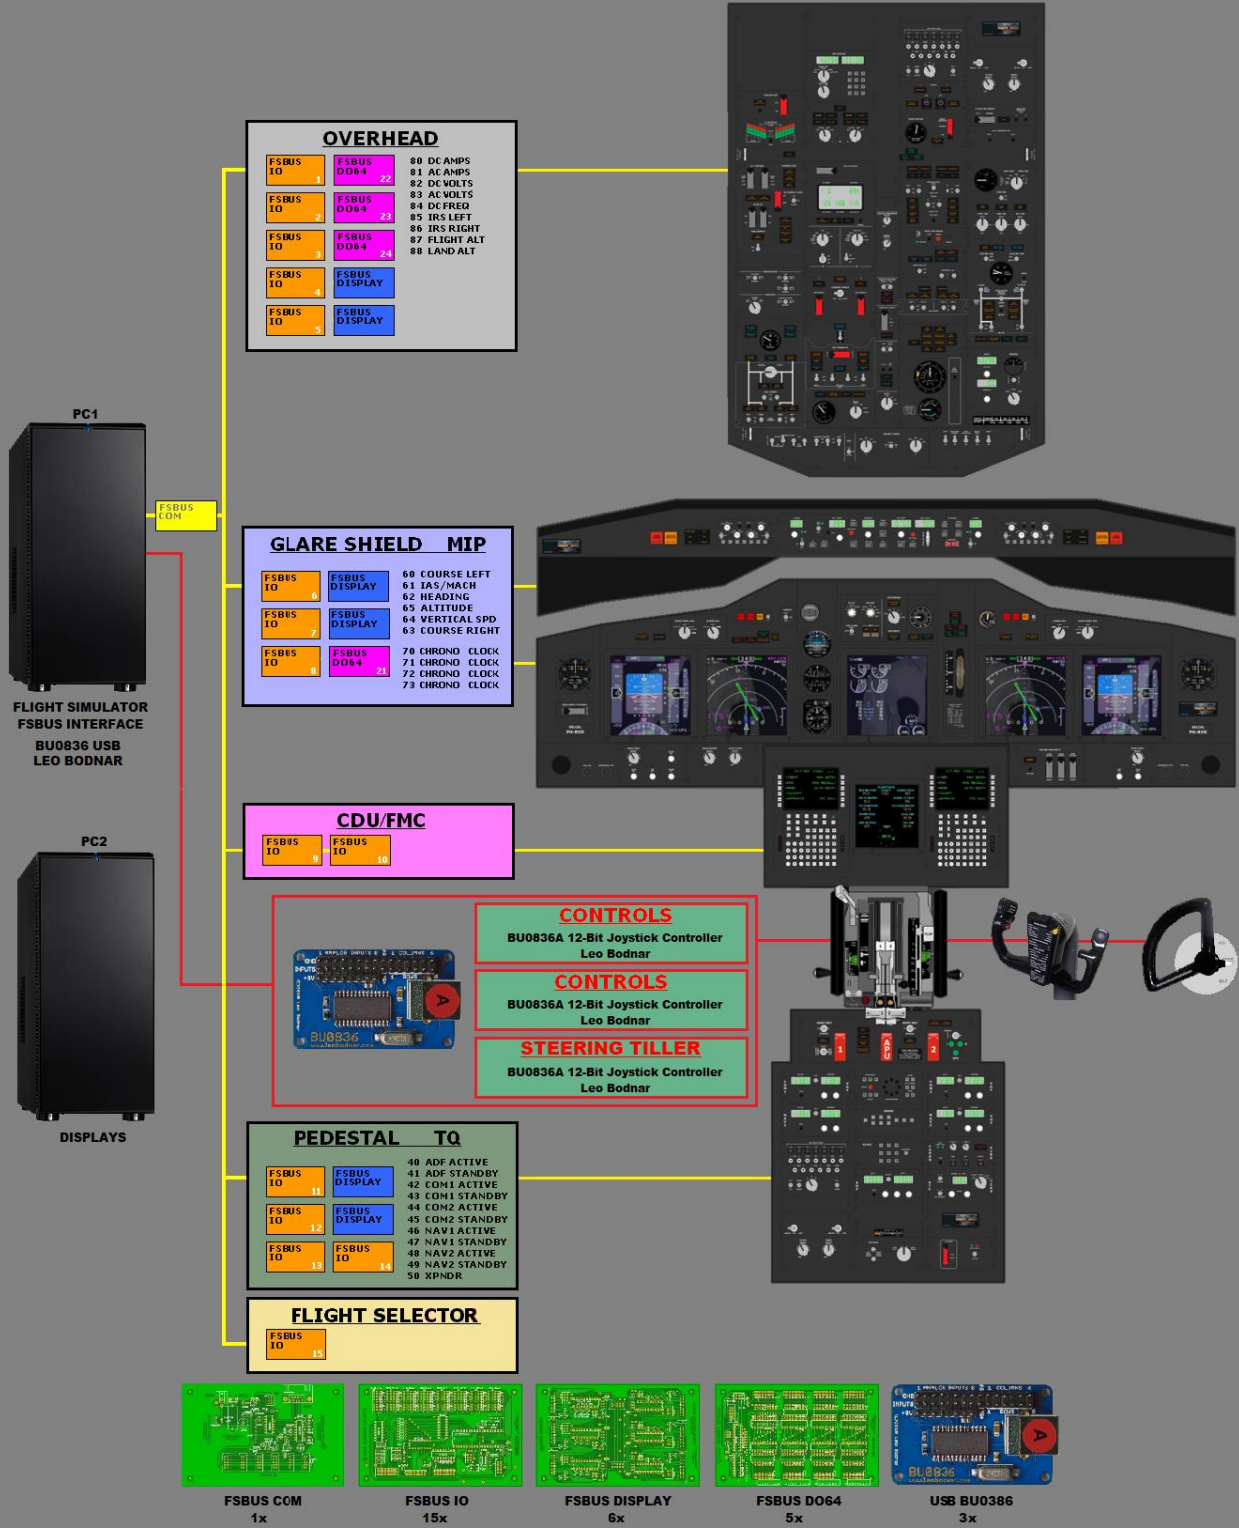

OVERHEAD		
FSBUS IO 1	FSBUS D064 22	80 DC AMPS
FSBUS IO 2	FSBUS D064 23	81 AC AMPS
FSBUS IO 3	FSBUS D064 24	82 DC VOLTS
FSBUS IO 4	FSBUS DISPLAY	83 AC VOLTS
FSBUS IO 5	FSBUS DISPLAY	84 DC FREQ
		85 IRS LEFT
		86 IRS RIGHT
		87 FLIGHT ALT
		88 LAND ALT

GLARE SHIELD MIP		
FSBUS IO 6	FSBUS DISPLAY	60 COURSE LEFT
FSBUS IO 7	FSBUS DISPLAY	61 IAS/MACH
FSBUS IO 8	FSBUS D064 21	62 HEADING
		65 ALTITUDE
		64 VERTICAL SPD
		63 COURSE RIGHT
		70 CHRONO CLOCK
		71 CHRONO CLOCK
		72 CHRONO CLOCK
		73 CHRONO CLOCK

CDU/FMC	
FSBUS IO 9	FSBUS IO 10

PEDESTAL TQ		
FSBUS IO 11	FSBUS DISPLAY	40 ADF ACTIVE
FSBUS IO 12	FSBUS DISPLAY	41 ADF STANDBY
		42 COM1 ACTIVE
		43 COM1 STANDBY
		44 COM2 ACTIVE
		45 COM2 STANDBY
		46 NAV1 ACTIVE
		47 NAV1 STANDBY
		48 NAV2 ACTIVE
		49 NAV2 STANDBY
		50 XPDR

FLIGHT SELECTOR
FSBUS IO 13



FSBUS COM
1x



FSBUS IO
15x



FSBUS DISPLAY
6x



FSBUS D064
5x



USB BU0386
3x

PC1
FLIGHT SIMULATOR
FSMBUS INTERFACE
BU0836 USB
LEO BODNAR

PC2
DISPLAYS

